

Security Control Systems, Inc.

DMP XR20, XR200, 1912XR English Display Keypad Commercial

Dear Customer:

Your Executive Service Alarm System uses an English display keypad that is menu driven. Throughout its operation it will prompt you by asking you a series of questions. To answer the questions simply push the white button that is directly under the answer you wish to choose. For example: If the keypad reads "Bypass No Yes" and you want to bypass, then push the white button that is directly under the word "Yes".

If you have questions concerning the operation of your system, please call: 612.884.2566. If you wish to cancel and alarm or test your system, please call: 612.854.0827 or 800.432.9250.

Ready to Arm: The keypad should read "System Ready". If not, check all devices, doors, windows..., to be sure they are closed.

To Arm Entire System: Push the command button + all. The keypad will read "all On". and the exit delay time will start to count down. Leave through your delay door.

****If you want to remove the delay time from your entry/exit door(s) push instant anytime during the exit delay count down.

To Arm Perimeter Only: Push the command button + perimeter. The keypad will read "Perimeter On" and the exit delay time will start to count down. Leave through your delay door.

****If you want to remove the delay time from your entry/exit door(s) push instant anytime during the exit delay count down.

To Disarm System: Enter 4 digit code. The keypad will read "All System Off".

To Bypass a Bad Zone: Push command + either away or home. The keypad will display the bad zone then read "Bypass No Yes". If you answer no the arming process will stop. If you answer yes, the bad zone will be bypassed and the exit delay time will start to count down.

To Clear Burglary Zones From Alarm Memory: Arm your system and wait until the exit delay time has expired. Disarm your system. The alarm memory will be cleared.

To Silence Keypad Trouble Beeps: Push any white button. (Some types of troubles may also require you to enter your 4 digit code).

To Silence Siren: Enter your 4 digit code.

To Reset Smoke Detectors/or Clear Alarm Memory on 24 Hour Zones: Press the command button until the keypad reads "Menu No Yes". Press Yes + 4 digit code. The keypad will read "Sensor Reset?". Press any white button.

Audible Police Call: Press both left hand white buttons at the same time and hold for 3 seconds.

Silent Police Call: Press both center white buttons at the same time and hold for 3 seconds.

Fire Call: Press both right hand white buttons at the same time and hold for 3 seconds.